

Macurco™

BUILDING & HOME SOLUTIONS

Whether you are looking for gas detection for a security system, building automation or HVAC system, for personal safety or for monitoring specific gases in potentially hazardous environments, Macurco has a gas detector to meet your needs.



Macurco Notification Series: HS-SYNC

The Macurco Notification series is designed for spaces where distinctive visual or audible signal is required. The family is comprised of horn only, strobe only, or combination horn/strobe. These devices use low current to provide a high decibel output, and can be easily seen and heard from afar. The product offering works well with Macurco products including the Macurco control panels and the Macurco 6 & 12 Series detectors. This notification device can be flush or surface mounted on a standard 4" x 4" electrical box.



Key Features

- Mounts to 4x4 electrical box
- Nominal voltage: Regulated 24VDC
- Synchronizes Macurco Notification Series
- Operating voltage: 16 to 33 VDC
- Operating environment: 32°F to 120°F (0°C to 49°C). 10 to 93% RH
- Works with all Macurco control panels


Macurco Sync Module

Specifications

Size:	4.5" x 4.5" x 1"
Weight:	0.5 lbs
Housing:	Gray – Fire Retardant Material
Rated Input Voltage:	Regulated 24 VDC/FWR (16-33VDC)
Supervisory Current (NAC+/-):	150mA, maximum
Alarm Current Consumption (NAC+/-):	5 mA, maximum
Alarm Current Consumption (SIL+/-):	5 mA, maximum
Maximum Output Current:	3.0 amps, maximum
Operating Environment:	0°F to 120°F (-18°C to 49°C)
Storage Temperature:	-4°F to 176°F (-20°C to 80°C)
Flash Rate:	1Hz
Sound Sync:	Supports both Temporal 3 & 4
Wiring:	12-2 to 18-2 AWG
Mounting:	Standard 4x4 electrical box
Certifications:	UL 464, ULC S525

Wiring

*Typical Connection to Macurco DVP Control Panel

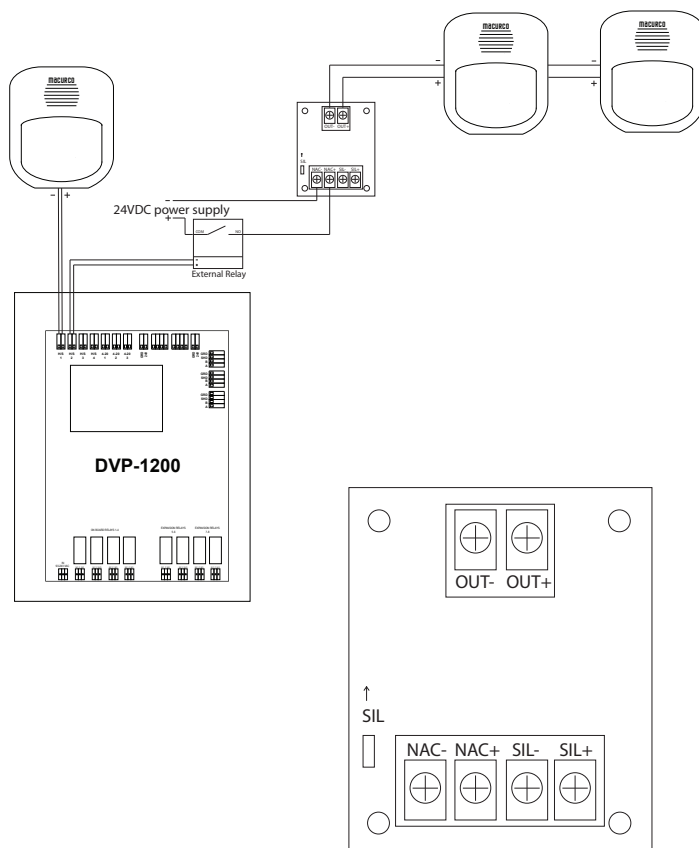

Specifications: Macurco Sync Module

MODEL	DESCRIPTION	MAX UNITS SUPPORT
MHG	Wall Mount Horn	60
MSG-X	Wall Mount Strobe	30
HS-X	Wall Mount Horn/Strobe	20

**Macurco reserves the right to change any specifications without notice.

Macurco Gas Detection

1504 W. 51st Street
Sioux Falls, SD 57105

Phone: 1-877-367-7891

Website: www.macurco.com

Email: info@macurco.com

